 
 
hinge adjustment

Our hinges offer 6-way adjustment:







Height adjustment (Up - Down)

Loosen non-cam screws to adjust door position (+-0.0787") and re-tighten screws.

Depth adjustment (In - Out)

Loosen non-cam screw to adjust door gap (-0.1378", +0.0787") and re-tighten screw.

Applications:

- To reduce gaps between two butt doors
- Prevent doors from binding at the sides
- Align door with side of drawer/grill front
- Straighten a slightly rotated door

Applications:

- To reduce gap to countertop
- Help reduce water intrusion
- Prevent doors binding on the countertop
- Correct alignment of doors and drawers

Applications:

- To ensure front face alignment
- Help reduce water intrusion
- Correct doors that have slight curvature due to incorrect hinge adjustment







